


NEWMAN

SANITARY GASKET COMPANY

COMPOUND SELECTION FOR FLUIDS AND CHEMICALS

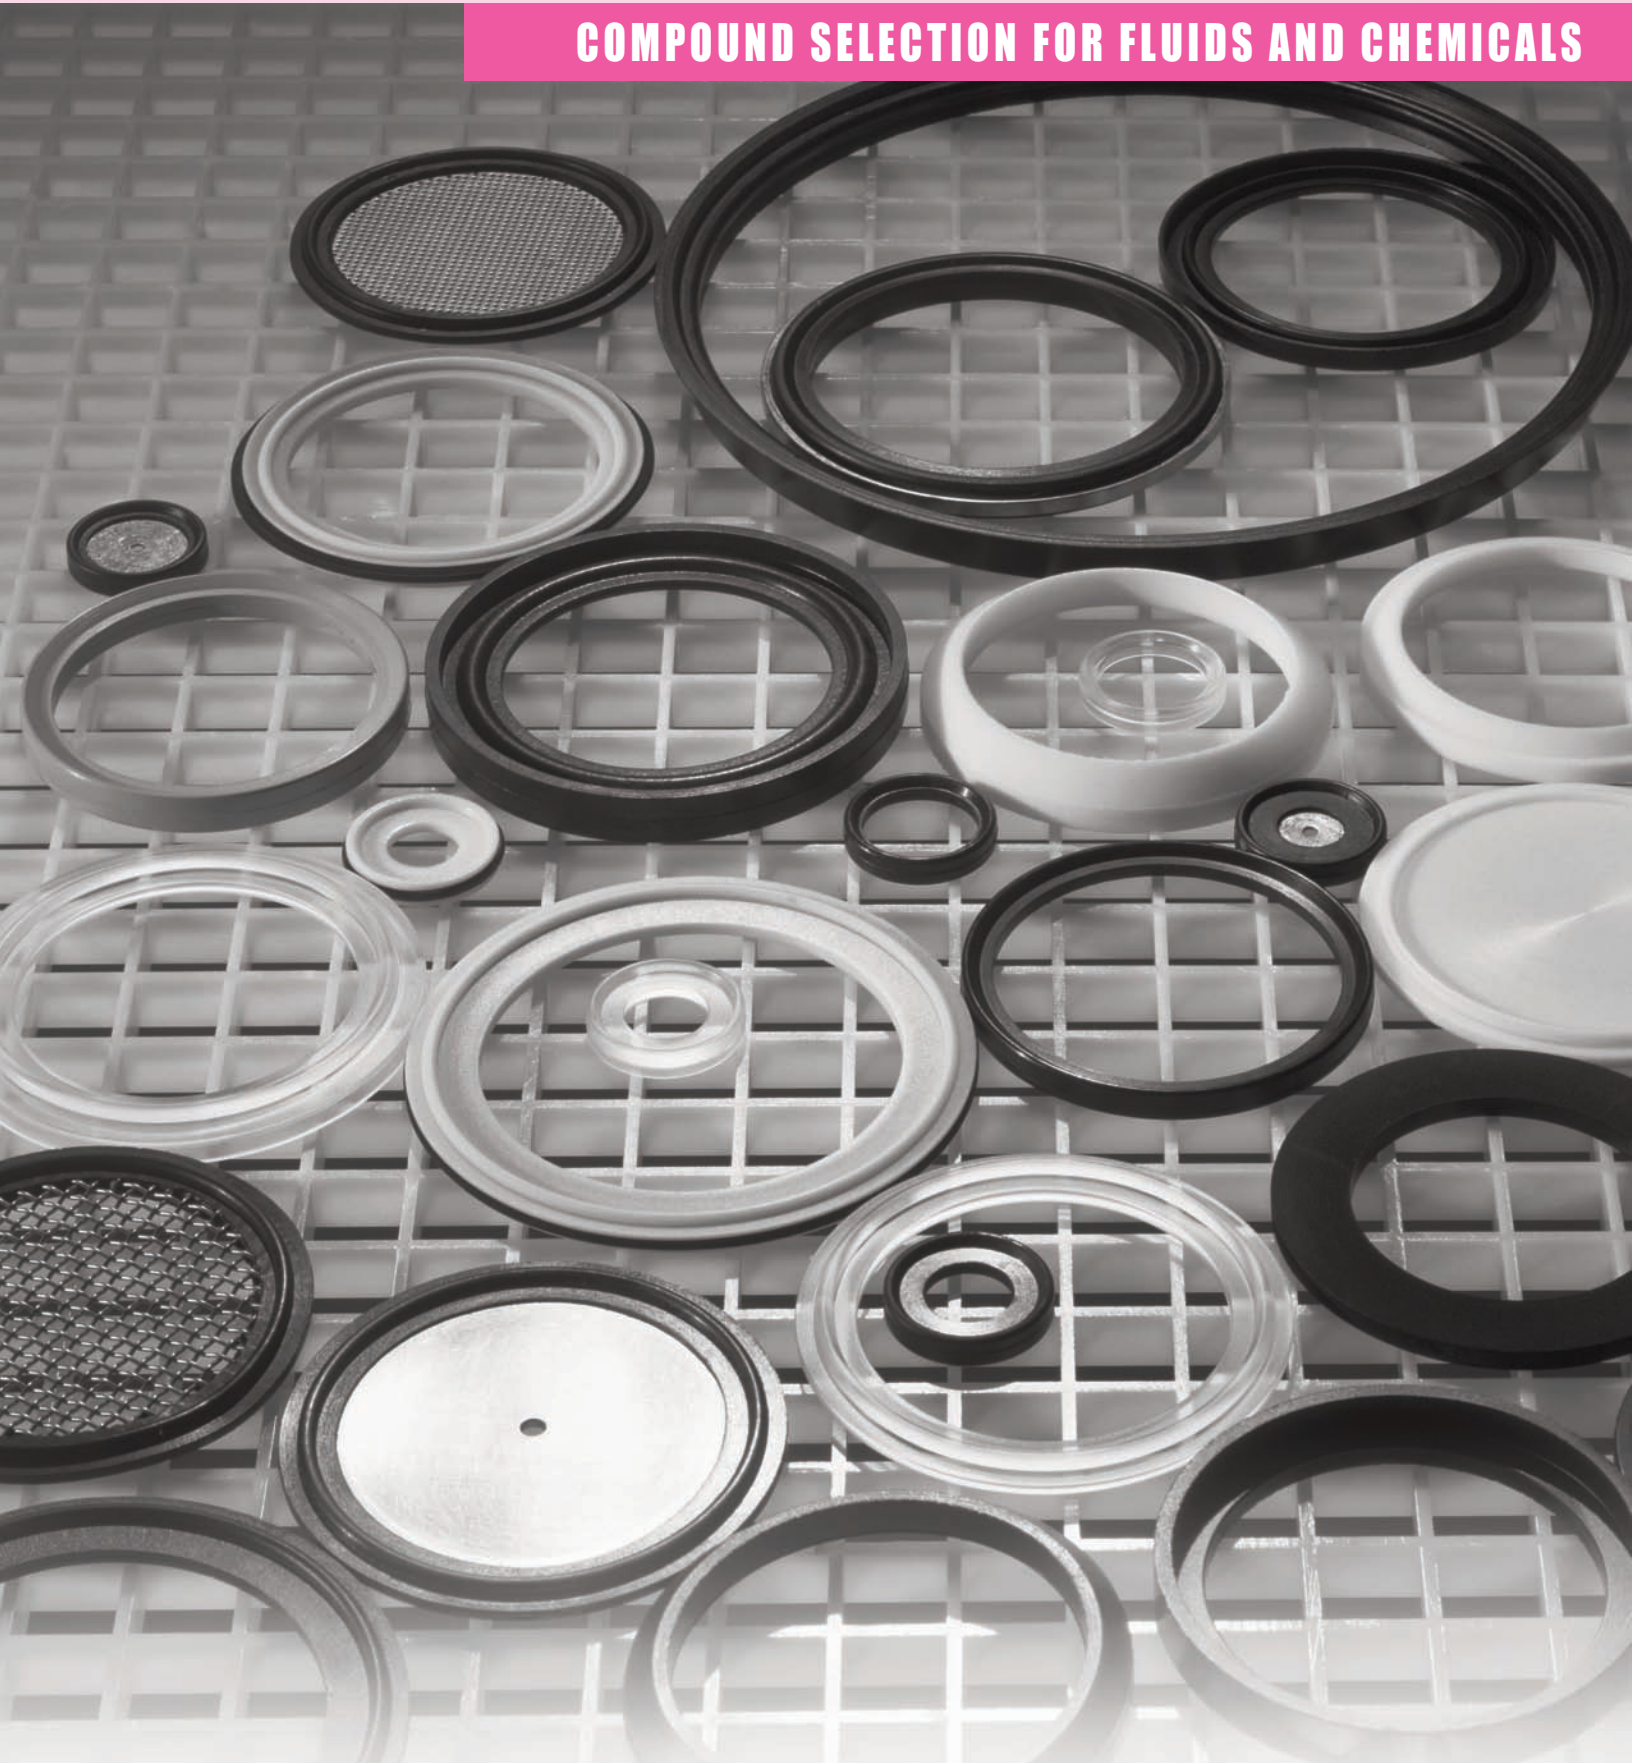

COMPOUND SELECTION FOR FLUIDS AND CHEMICALS

(See Note Below)

	BUNA-N	E.P.D.M.	VITON®	SILICONE		BUNA-N	E.P.D.M.	VITON®	SILICONE
Acetaldehyde	D	A	D	B	Carbon Dioxide	A	B	A	B
Acetamide	A	A	B	B	Carbonic Acid	B	A	A	A
Acetic Acid, 30%	B	A	B	A	Carbon Monoxide	A	A	A	A
Acetone	D	A	D	C	Carbon Tetrachloride	C	D	A	D
Acetophenone	D	A	D	D	Castor Oil	A	B	A	A
Acetyl Chloride	D	D	A	C	Cellosolve Acetate	D	B	D	D
Acetylene	A	A	A	B	China Wood Oil (Tung Oil)	A	C	A	D
Acrylonitrile	D	D	C	D	Chlorine (wet)	D	C	A	D
Adipic Acid	A	A	E	E	Chlorine Dioxide	D	C	A	E
Ammonia Gas (cold)	A	A	D	A	Chloroacetic Acid	D	A	D	E
Ammonium Chloride (aq)	A	A	A	E	Chloroacetone	D	A	D	D
Ammonium Hydroxide (conc.)	D	A	B	A	Chlorobenzene	D	D	A	D
Ammonium Nitrate (aq)	A	A	E	E	Chlorobromomethane	D	B	A	D
Ammonium Nitrite (aq)	A	A	E	B	Chloroform	D	D	A	D
Ammonium Phosphate (aq)	A	A	E	A	Chlorotoluene	D	D	A	D
Ammonium Sulfate (aq)	A	A	D	E	Chrome Plating Solutions	D	C	A	C
Amyl Acetate (Banana Oil)	D	A	D	D	Chromic Acid	D	B	A	B
Amyl Alcohol	B	A	B	D	Cod Liver Oil	A	A	A	B
Amyl Borate	A	D	A	E	Copper Acetate (aq)	B	A	D	D
Arsenic Acid	A	A	A	A	Copper Chloride (aq)	A	A	A	A
Arsenic Trichloride (aq)	A	C	E	E	Copper Cyanide (aq)	A	A	A	A
Barium Chloride (aq)	A	A	A	A	Copper Sulfate (aq)	A	A	A	A
Barium Hydroxide (aq)	A	A	A	A	Creosote (coal tar)	A	D	A	D
Barium Sulfate (aq)	A	A	A	A	Cresylic Acid	D	D	A	D
Barium Sulfide (aq)	A	A	A	A	Cyclohexane	A	D	A	D
Benzaldehyde	D	A	D	B	Cyclohexanol	C	C	A	D
Benzene	D	D	A	D	Cyclohexanone	D	B	D	D
Benzoic Acid	C	C	A	C	Denatured Alcohol	A	A	A	A
Benzoyl Chloride	D	D	A	E	Detergent Solutions	A	A	A	A
Benzyl Alcohol	D	A	A	B	Diacetone Alcohol	D	A	D	B
Benzyl Chloride	D	D	A	D	Dibenzyl Ether	D	B	D	E
Boric Acid	A	A	A	A	Dibenzyl Sebecate	D	B	B	C
Brine	A	A	A	A	Dibromoethyl Benzene (Alkazene)	D	D	B	D
Bromine, Anhydrous	D	D	A	D	Dibutyl Amine	D	C	D	C
Bromine Water	D	B	A	D	Dibutyl Ether	D	C	C	D
Butadiene	D	C	A	D	Dibutyl Phthalate	D	B	C	B
Butane	A	D	A	D	Dibutyl Sebecate	D	B	B	B
Butyl Acetate	D	C	D	D	O-Dichlorobenzene	D	D	A	D
Butyl Acetyl Ricinoleate	C	A	A	E	Dichloro-Isopropyl Ether	D	C	C	D
Butyl Alcohol	A	B	A	B	Diethylamine	B	B	D	B
Butyl Amine	C	B	D	D	Diethyl Benzene	D	D	A	D
Butyl Benzoate	D	B	A	E	Diethyl Ether	D	D	D	D
Butyl Carbitol	D	A	A	D	Diethylene Glycol	A	A	A	B
Butyl Cellosolve	D	A	D	E	Diethyl Sebecate	B	B	B	B
Butyl Oleate	D	B	A	E	Diisobutylene	B	D	A	D
Butyl Stearate	B	C	A	E	Diisopropyl Benzene	D	D	A	E
Butylene	B	D	A	D	Diisopropyl Ketone	D	A	D	D
Butyraldehyde	D	B	D	D	Diisopropylidene Acetone	D	C	D	D
Carbolic Acid (Phenol)	D	B	A	D	Dimethyl Aniline (Xylydine)	C	B	D	D
Carbon Bisulfide	C	D	A	D	Dimethyl Ether (Methyl Ether)	A	D	A	A

A – SATISFACTORY B – FAIR C – SEVERE EFFECT – EXCEPT FOR SOME STATIC APPLICATIONS D – UNSATISFACTORY E – INSUFFICIENT INFORMATION

NOTE: The information contained in these tables was derived from several sources and is to be used as a general guide only. Compounds suitable for any specific application rests solely by the end user. Newman Sanitary Gasket Company assumes no responsibility whatsoever.

COMPOUND SELECTION FOR FLUIDS AND CHEMICALS

(See Note Below)

	BUNA-N	E.P.D.M.	VITON®	SILICONE		BUNA-N	E.P.D.M.	VITON®	SILICONE
Dimethyl Formamide	B	B	D	B	Hydrogen Sulfide (wet) cold	D	A	D	C
Dimethyl Phthalate	D	B	B	E	Hydroquinone	C	B	B	E
Dinitrotoluene	D	D	D	D	Iodoform	E	D	E	E
Diocetyl Phthalate	C	B	B	C	Isobutyl Alcohol	B	A	A	A
Diocetyl Sebecate	D	B	B	C	Isooctane	A	D	A	D
Dioxane	D	B	D	D	Isopropyl Acetate	D	B	D	D
Dioxolane	D	B	D	D	Isopropyl Alcohol	B	A	A	A
Dipentene	A	D	A	D	Isopropyl Chloride	D	D	A	D
Diphenyl (Phenylbenzene)	D	D	A	D	Isopropyl Ether	B	D	D	D
Diphenyl Oxides	D	D	A	C	Kerosene	A	D	A	D
Dowtherm Oil	D	D	A	C	Lacquers	D	D	D	D
Ethane	A	D	A	D	Lactic Acid (cold)	A	A	A	A
Ethanolamine	B	B	D	B	Lead Acetate (aq)	B	A	D	D
Ethyl Acetate	D	B	D	B	Lead Nitrite (aq)	A	A	E	B
Ethyl Acetoacetate	D	B	D	B	Lime Bleach	A	A	A	B
Ethyl Acrylate	D	B	D	B	Linoleic Acid	B	D	B	B
Ethyl Alcohol	A	A	C	A	Maleic Acid	D	B	A	E
Ethyl Benzene	D	D	A	D	Malic Acid	A	B	A	B
Ethyl Benzoate	D	A	A	D	Methane	A	D	B	D
Ethyl Cellosolve	D	B	D	D	Methyl Acetate	D	A	D	D
Ethyl Cellulose	B	B	D	C	Methyl Acrylate	D	B	D	D
Ethyl Chloride	A	C	A	D	Methylacrylic Acid	D	B	D	D
Ethyl Chlorocarbonate	D	B	A	D	Methyl Alcohol	A	A	D	A
Ethyl Chloroformate	D	B	D	D	Methyl Bromide	B	D	A	E
Ethyl Ether	C	C	D	D	Methyl Butyl Ketone	D	A	D	C
Ethyl Pentachlorobenzene	D	D	A	D	Methyl Cellosolve	C	B	D	D
Ethylene	A	B	A	E	Methyl Chloride	D	C	B	D
Ethylene Chloride	D	C	B	D	Methyl Cyclopentane	D	D	B	D
Ethylene Diamine	A	A	D	A	Methylene Chloride	D	C	B	D
Ethylene Dichloride	D	C	A	D	Methyl Ether	A	D	A	A
Ethylene Glycol	A	A	A	A	Methyl Ethyl Ketone	D	A	D	D
Fluoroboric Acid	A	A	E	E	Methyl Isobutyl Ketone	D	B	D	D
Freon 11	B	D	A	D	Methyl Methacrylate	D	C	D	D
Freon 12	A	B	B	D	Milk	A	A	A	A
Freon 22	D	A	D	D	Mineral Oil	A	C	A	B
Fumaric Acid	A	B	A	B	Monoethanol Amine	D	A	D	B
Gallic Acid	B	B	A	E	Monomethyl Ether	A	D	A	A
Gasoline	B	D	A	D	Monovinyl Acetylene	A	A	A	B
Glucose	A	A	A	A	Mustard Gas	E	A	E	A
Glycerin	A	A	A	A	Naphthalenic Acid	B	D	A	D
Hexane	A	D	A	D	Natural Gas	A	D	A	A
Hexyl Alcohol	A	C	A	B	Nickel Acetate (aq)	B	A	D	D
Hydrazine	B	A	D	C	Nickel Chloride (aq)	A	A	A	A
Hydrobromic Acid	D	A	A	D	Nickel Sulfate (aq)	A	A	A	A
Hydrocyanic Acid	B	A	A	C	Nitric Acid (dilute)	D	B	A	B
Hydrofluoric Acid (conc.) cold	D	C	A	D	Nitrobenzene (Ligroin)	A	D	A	D
Hydrofluosilicic Acid	B	B	A	D	Nitroethane	D	B	D	D
Hydrogen Gas	A	A	A	C	Nitrogen Tetroxide	D	C	D	D
Hydrogen Peroxide (90%)	D	B	B	B	Octachlorotoluene	D	D	A	D

A – SATISFACTORY B – FAIR C – SEVERE EFFECT – EXCEPT FOR SOME STATIC APPLICATIONS D – UNSATISFACTORY E – INSUFFICIENT INFORMATION

NOTE: The information contained in these tables was derived from several sources and is to be used as a general guide only. Compounds suitable for any specific application rests solely by the end user. Newman Sanitary Gasket Company assumes no responsibility whatsoever.

COMPOUND SELECTION FOR FLUIDS AND CHEMICALS

(See Note Below)

	BUNA-N	E.P.D.M.	VITON®	SILICONE		BUNA-N	E.P.D.M.	VITON®	SILICONE
Octadecane	A	D	A	D	Sulfurous Acid	B	B	A	D
N-Octane	B	D	A	D	Tannic Acid	A	A	A	B
Octyl Alcohol	B	C	A	B	Tartaric Acid	A	B	A	A
Oleic Acid	C	D	B	D	Tetrachloroethylene	D	D	A	D
Oxalic Acid	B	A	A	B	Toluene	D	D	A	D
Oxygen - Cold	B	A	A	A	Triethanol Amine	B	A	D	E
Ozone	D	A	A	A	Trioctyl Phosphate	D	A	B	C
Palmitic Acid	A	B	A	D	Tung Oil (China Wood Oil)	A	C	A	D
Perchloric Acid	D	B	A	D	Turpentine	A	D	A	D
Phenyl Ethyl Ether	D	D	D	D	Vegetable Oils	A	C	A	B
Phosphoric Acid - 20%	B	A	A	B	Vinegar	B	A	A	A
Phosphorus Trichloride	D	A	A	E	Whiskey, Wines	A	A	A	A
Piperidine	D	A	D	D	White Pine Oil	B	D	A	D
Polyvinyl Acetate Emulsion	E	A	E	E	Zinc Chloride (aq)	A	A	A	A
Potassium Acetate (aq)	B	A	D	D					
Potassium Chloride (aq)	A	A	A	A					
Potassium Cyanide (aq)	A	A	A	A					
Potassium Nitrate (aq)	A	A	A	A					
i-Propyl Acetate	D	B	D	D					
Propyl Nitrate	D	B	D	D					
Propylene	D	D	A	D					
Pyridine	D	B	D	D					
Salicylic Acid	B	A	A	E					
Silicone Oils	A	A	A	C					
Soap Solutions	A	A	A	A					
Sodium Acetate (aq)	B	A	D	D					
Sodium Bicarbonate (aq) (baking soda)	A	A	A	A					
Sodium Borate (aq)	A	A	A	A					
Sodium Chloride (aq)	A	A	A	A					
Sodium Hydroxide (aq)	B	A	B	B					
Sodium Nitrate (aq)	B	A	E	D					
Sodium Peroxide (aq)	B	A	A	D					
Soybean Oil	A	C	A	A					
Steam, under 300°F	A	A	A	B					
Stearic Acid	B	B	E	B					
Stoddard Solvent	A	D	A	D					
Sulfur Chloride (aq)	C	D	A	C					
Sulfuric Acid (dilute)	C	B	A	D					

A – SATISFACTORY B – FAIR C – SEVERE EFFECT – EXCEPT FOR SOME STATIC APPLICATIONS D – UNSATISFACTORY E – INSUFFICIENT INFORMATION

NOTE: The information contained in these tables was derived from several sources and is to be used as a general guide only. Compounds suitable for any specific application rests solely by the end user. Newman Sanitary Gasket Company assumes no responsibility whatsoever.



P.O.Box 222, Lebanon, Ohio 45036 • 513.932.7379 • FAX 513.932.4493
www.newmangasket.com • e-mail: customer@newmangasket.com